

Below are the general configuration settings used when configuring an ADSL or ADSL2 modem for an iSage broadband account:

**Username:** username@isage.net.au

**Password:** your password

**Connection Type:** PPPoA LLC

**VPI / VCI:** 8 / 35

**MTU:** Modem Default

**IP Address:** Server Assigned

**Primary DNS Server:** 124.254.72.70

**Secondary DNS Server:** 124.254.72.68

NOTE: Auto Assigned DNS configuration is recommended. The DSL type/mode is **G.DMT** for ADSL and for ADSL2 it is

**ADSL2+, G.dmt.bis or G.dmt.bisplus**

.

To configure your modem with these settings you will either need the installation CD that came with your modem or if you are using an Ethernet modem you can generally use a web login page to modify the configuration.

Click [here](#) for the manuals of the modems we have available for download.