

Below are the general configuration settings used when configuring an ADSL or ADSL2 modem for an iSage broadband account:

Username: username@isage.net.au

Password: your password

Connection Type: PPPoA LLC

VPI / VCI: 8 / 35

MTU: Modem Default

IP Address: Server Assigned

Primary DNS Server: 124.254.72.70

Secondary DNS Server: 124.254.72.68

NOTE: Auto Assigned DNS configuration is recommended. The DSL type/mode is **G.DMT** for ADSL and for ADSL2 it is

ADSL2+, G.dmt.bis or G.dmt.bisplus

.

To configure your modem with these settings you will either need the installation CD that came with your modem or if you are using an Ethernet modem you can generally use a web login page to modify the configuration.

Click [here](#) for the manuals of the modems we have available for download.